# airofog® U/a



Airo Pro .5 Gallon Sprayer 501-505-180



Airo Pro 1 Gallon Sprayer 501-504-210



Airo Pro 1.5 Gallon Sprayer 501-502-180

Airo Pro Sprayer Manual

### Safety Notices

Airofog Airopro Professional Sprayers referred to in this document are designed for use by qualified and experienced personnel. Please read this instruction thoroughly before usage.

#### Safety Instruction

- Keep out reach of children
- Before use, check condition and proper function of the sprayer
- Only pump up and down and maintain sprayer in an upright position or a vertically hanging position
- Do not leave insecticide filled sprayer out in direct sunlight
- Note wind direction when in use to avoid spraying in areas that arent supposed to be treated and yourself
- Never spray into electrical outlets or cable boxes
- When using metal extension close to electrical equipment, pay attention to avoid electric shock
- Do not operate a sprayer that has visible wear on parts
- Always wear personal protective equipment (PPE) when handling dangerous substances
- Application of insecticides should follow manufacturer recommendations and must be in compliance with local regulations in regards to the application of pesticides. We are not liable for consequences of improper application
- When unscrewing cap, never point the lance at others or yourself
- Never blow through clogged nozzles or valves with your mouth
- Before repair and maintenance, drain insecticide and release all pressure from sprayer
- Always replace damaged, or malfunctioning parts

#### **Caution**



It is the operator's responsibility to ensure the safe use of the sprayer and that they're fully compliant with national or local regulations governing compression sprayer and applications of pesticides.



AIROFOG USA is not liable for damages that has ocurred due to improper use/repair/maintenance, the use of non-recommended or non OEM parts, and acceptance of damaged/broken sprayers for any reason.



Airofog USA 15074 Aviation Loop Drive Brooksville, FL 34604 USA

#### Cleaning the sprayer

Maintenance

- · Rinse tank thoroughly with water
- Add water and detergent to the tank
- · Attach pump cap and tighten it
- Shake vigorously to clean inside of tank
- Pressurize the tank
- Flush the hose and trigger valve
- Empty the tank and refill with clean water
- Flush the hose and trigger valve once more
- Empty remaining water
- Sprayer should be cleaned thoroughly weekly

#### After every use

- Empty tank
- Drain the hose and lance
- Carefully inspect all gaskets and hoses as well as the other fittings for wear
- Replace any worn parts as necessary

### Pump & trigger valve maintenance

- Piston o-ring and trigger valve o-ring should be greased every 90 days
- Lightly grease threads on the inside of the filler cap with marine or automotive grease every 90 days
- Check valve at the bottom of the pump cylinder for wear or loose fit. This valve prevents liquid from entering pump. If Liquid is leaking into pump, valve should be replaced

### Clogged nozzle and extension straw

- DO NOT insert metal objects into tip
- Clean with soft bristle brush to free clogs
- Detergents or solvents can be used to soak tip
- DO NOT use ammonia; it can corrode brass
- Run warm water over and into extension straw
- Blow compressed air through the back of the nozzle and extension straw
- Remove strainer housing to access the strainer replace strainer and wash out the housing

#### Airofog Guarantee

Airofog USA guarantees the Airopro professional sprayers to be free of defects in materials and workmanship to the original purchaser for a period of one(1) year on labor and parts which are not subject to usual wear During this period, AIROFOG USA will replace and/or repair the parts and manufacturer faults on the exclusive judgment of our technical department free of charge

Shipping and dispatch of defect equipment will be at original purchaser's expense


Guarantee does not cover damages occurred during transport or by incorrect handling, tampering, use, or the use of non-recommended products and so on.

Under no circumstances will AIROFOG USA be liable for damages due to improper use or application. Under no circumstances will AIROFOG USA be responsible for damages to any persons or property.




Airofog USA 15074 Aviation Loop Drive Brooksville, FL 34604 USA

### Airopro Sprayer Trigger Diagram

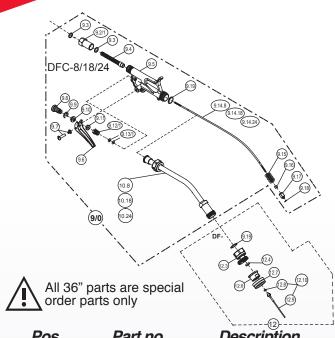

		`12)	
Pos.	Part no.	Description	
DFC8	501-000-080	DFC valve assembly, 9"	
DFC18	501-000-180	DFC valve assembly, 18"	
DFC24	501-000-240	DFC valve assembly, 24"	
9.1/2	501-009-020	Strainer housing	
9.3	500-009-030	Nylon gasket	
9.4	500-009-040	Strainer	
9.5	500-009-050	Valve body	
9.6	500-000-060	Valve trigger	
9.7	500-000-070	Trigger screw	
9.8	500-000-080	Saftey lock nut	
9.9	500-009-090	Snap ring	
9.10	500-009-100	Adjustment screw	
9.11	500-009-110	Lock nut	
9.12/1	500-900-121	Packing nut (optional)	
9.13/1	500-009-131	O-ring x2	
9.14.8	500-009-141	Valve cable, 9"	
9.14.18	500-009-143	Valve cable, 18"	
9.14.24	500-009-144	Valve cable, 24"	

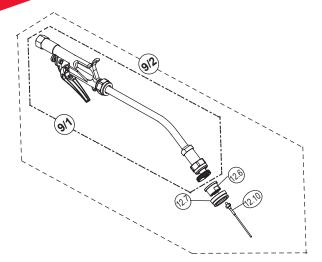

Pos.	Part no.	Description	
9.15	500-009-150	Seat stem spring	
9.16	500-009-160	Seat stem nut	
9.17	500-009-170	Seat stem	
9.18	500-009-180	Viton o-ring	
9.19	505-009-150	Gasket	
10.8	500-010-080	Valve extension, 9"	
10.18	500-010-240	Valve extension, 18"	
10.24	500-012-000	Valve extension, 24"	
12	500-012-000	Multi nozzle assembly	
12.3	500-012-030	Multi nozzle c&c tip holder	
12.4	500-012-040	VitonR gasket	
12.6	500-012-060	Multi nozzle c&c tip	
12.7	500-012-070	Tip retainer	
12.8	935-018-000	O-ring	
12.9	500-012-090	Extension straw	
12.10	500-012-100	Extension straw with o-ring	
9/2	501-000-082	Trigger valve cpl. 9"	
	501-000-182	Trigger valve cpl. 18"	
	501-000-242	Trigger valve cpl. 24"	
	501-000-362	Trigger valve cpl. 36"	
9/1	501-000-081	Trigger valve assembly, 9"	
	501-000-181	Trigger valve assembly, 18"	
	501-000-241	Trigger valve assembly, 24"	
	501-000-361	Trigger valve assembly, 36"	

#### Service kit


501-000-000

Airofog USA Pump/cylinder valve repair kit



Airofog USA 15074 Aviation Loop Drive Brooksville, FL 34604 USA

## Airopro Sprayer Tank Diagram

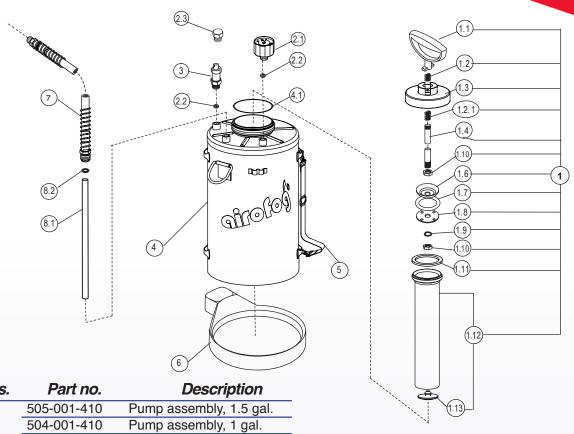

Pos.	Part no.	Description	
1	505-001-410	Pump assembly, 1.5 gal.	
	504-001-410	Pump assembly, 1 gal.	
	502-001-410	Pump assembly, .5 gal.	
1.1	501-001-010	Pump handle	
1.2	505-001-020	Pump lock spring	
1.2.1	505-001-021	Spring	
1.3	501-001-030	Pump cap	
1.4	1.4 505-001-440 Pump rod, 1.5 gal.		
	504-001-440	Pump rod, 1 gal.	
	502-001-440	Pump rod, .5 gal.	
1.6	505-001-060	Cup spreader plate	
1.7	505-001-070	O-ring	
1.8	505-001-080	Back plate	
1.9	505-001-090	Lock washer	
1.10	501-001-100	Plunger nut	
1.11	501-001-110	Pump gasket	
1.12	505-001-420	Pump cylinder, 1.5 gal.	
	504-001-420	Pump cylinder, 1 gal.	
	502-001-420	Pump cylinder 5 gal	

Pos.	Part no.	Description	
1.13	502-001-130	Check valve	
2.1	501-002-000	Psi gauge (0-60psi)	
2.2	505-002-020	Washer	
3	501-003-000	Pressure relief Valve	
4	505-004-410	0 Tank, 1.5 gal.	
	504-004-410	Tank, 1 gal.	
	502-004-410	Tank, .5 gal	
4.1	604-016-010	O-ring	
5	505-005-000	Adjustable carry strap	
6	505-006-010	Base, blue	
7	501-007-620	4ft hose, Blue	
	501-007-420	4ft hose, Green	
8	505-005-400	Syphon tube, 1.5 gal.	
	504-008-400	Syphon tube, 1 gal.	
	502-008-400	Syphon tube, .5 gal.	



Airofog USA 15074 Aviation Loop Drive Brooksville, FL 34604 USA



### Every Airo Pro sprayer includes:


- 1 pump cylinder repair kit
- · 1 valve assembly repair kit
- · 1 carry strap
- (1gal and 1.5gal tanks include an additional strap)
- 9", 18", or 24" wand
- · C&C tip with screw in C&C straw
- · Pressure gauge
- · Pressure relief valve



501-015-318 Complete 500-015-180 Tip only



Airofog USA 15074 Aviation Loop Drive Brooksville, FL 34604 USA

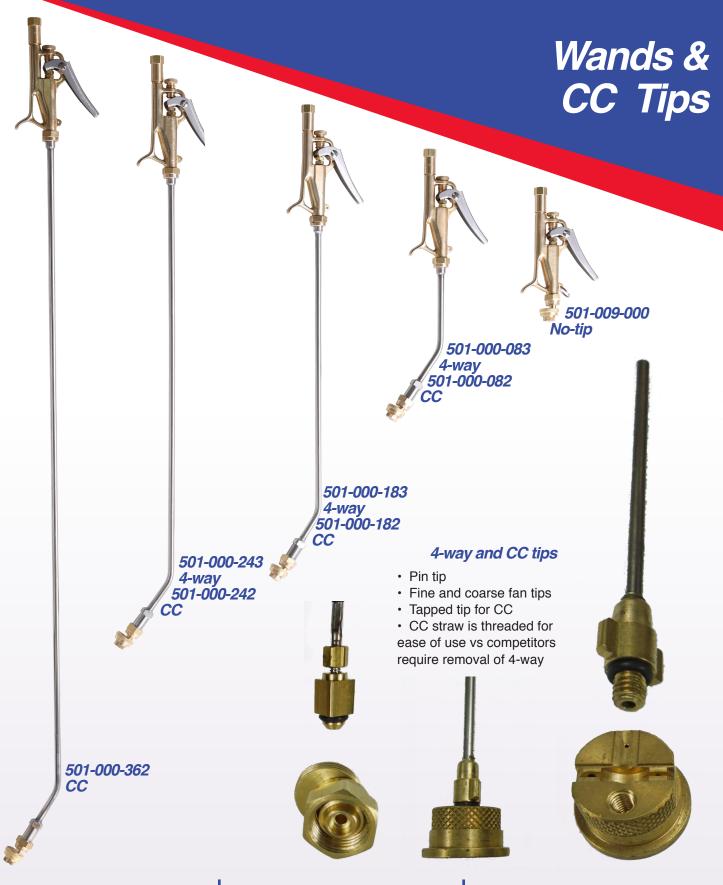



Airofog USA 15074 Aviation Loop Drive Brooksville, FL 34604 USA

### **Specifications**

	1/2 Gallon1	Gallon	1.1/2 Gallon	
Working Capacity1	/2 Gal.1	Gal.	1.1/2 Gal.	
Tank Volume4	/5 Gal.1	1.1/2 Gal.	.4/5 Gal.	
Tank Material	AISI 304			
Max. Working Pressure	90 psi			
Filling Mouth	Ø2.3/4 inch			
Pressure Relief Valve	operates at 60 psi			
Pressure Gauge	0-100 psi			
Pump Handle	brass, D-type			
Pump Cylinder	AISI 304 with Viton <sup>™</sup> AISI 304 with spring-loaded Viton <sup>™</sup> scheck-valve non-return valve			
Spray Hose	48 in			
Trigger Valve	brass, drip-free (DFC) type with lock-on & lock-off fatures			
Spray Lance	AISI 304, 9" or 18"			
Nozzle	4-way multi-nozzle with crack & crevice extension straw or even flat fan nozzle 8002E			
Carrying Straps	ingle shoulder strap double shoulder strap		oulder strap	
Service Kit	supplied as standard:pump kit,trigger valve kit,seal/gasket kit			
Tank Dimensions	Ø6.7 x H7.3 in	Ø6.7 x H11.2 in	Ø6.7 x H14.2 in	
Total Height	10.6 in	14.6 in	17.5 in	
Net Weight 5	.72 lbs.	6.82 lbs.	8.14 lbs.	

Specifications subject to change without notice or obligation. Trademarks appearing within are the property of Airofog Machinery Co., Ltd. Other trademarks are the property of their respective owners.



Airofog USA 15074 Aviation Loop Drive Brooksville, FL 34604 USA